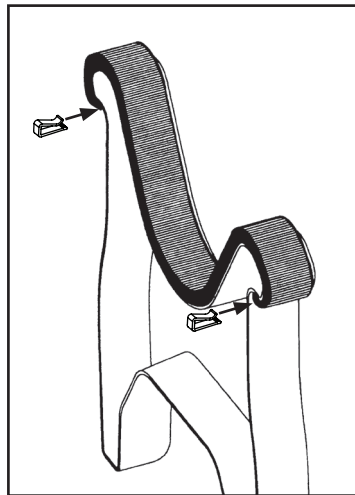


**Illustration #1**



**Illustration #2**

## Ultra Stand Instructions

- 1 - Carefully remove the backing from the adhesive on the foam strips. ***Be careful not to allow the adhesive to stick to itself.***
- 2 - Place the foam strips on the support ends, as shown in illustration #1. Be sure to accurately center the foam on the cradle, flush with the sharp edge. If the foam is not properly placed, ***immediately*** take it off and try again, as the adhesive will bond to the plastic very quickly.
- 3 - Four plastic clips are supplied to prevent separation of the foam strips from the adhesive. Insert clips over ends of foam as shown in illustration #2.

### **Each package contains:**

Two support ends  
One base

Four clips  
Two foam support strips